


Stringer comes in on top of landing or floor. (Normal)

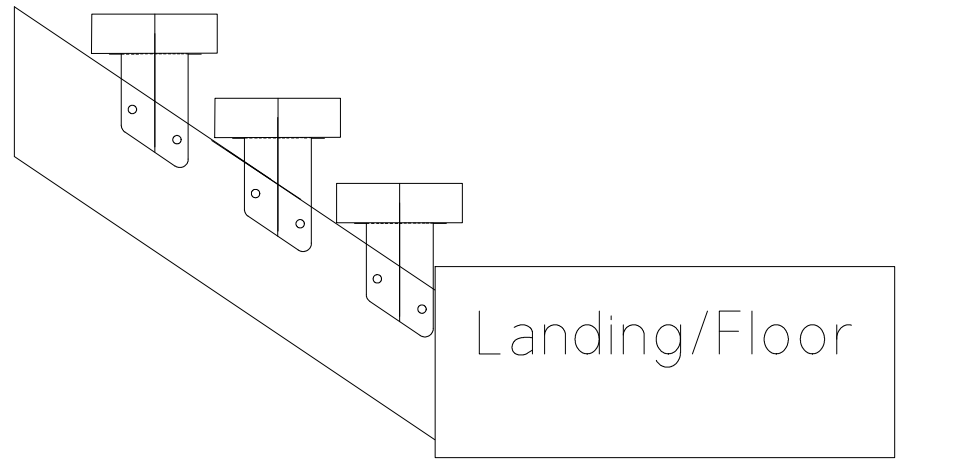

Stringer comes into the front of the landing. (Elevated Only)